


PISTON-PLUS PARTS LIST

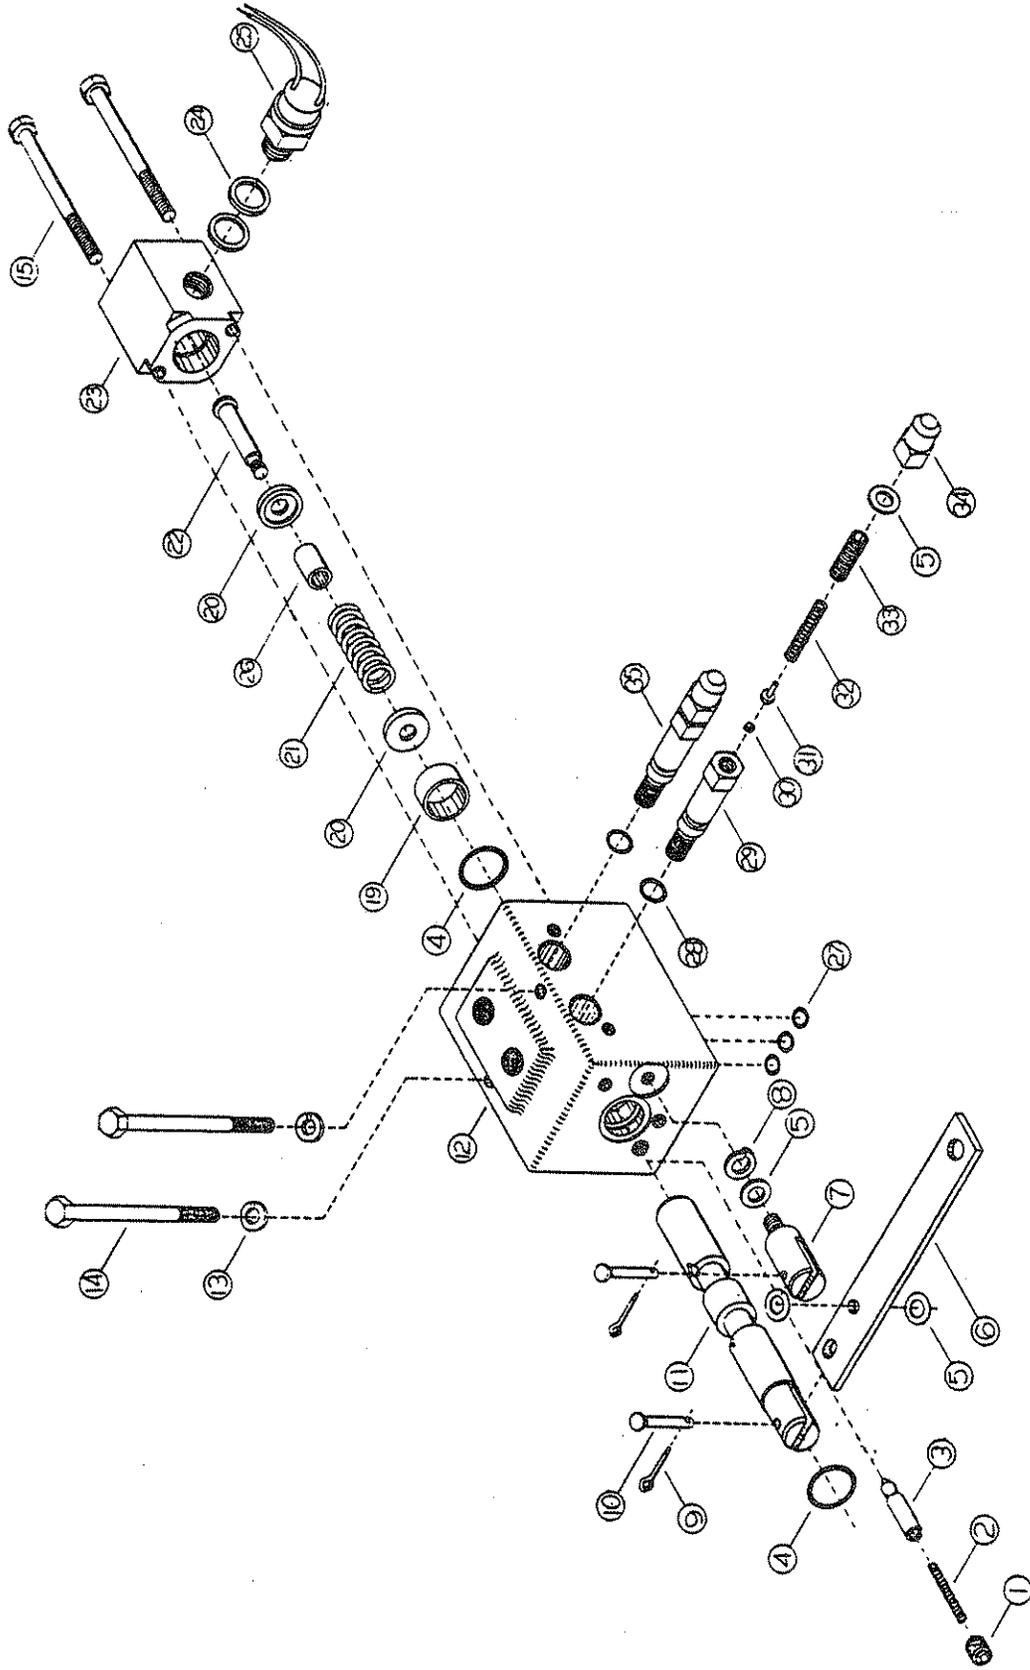

Control Valve Assembly

Control Valve Assembly

Drg. No.	Part No.	No. Req.	Part Description
1	1270	1	Plug, 1/8" NPT Sealant
2	1574	1	Spring, Check Plunger
3	1573	1	Plunger, Recycle Check
4	1546	2	O-Ring, Spool
5	1030	3	Washer, 5/16 Alum.
6	1572	1	Lever
7	1325	1	Pivot Bolt Clevis
8	1327	1	Washer, 5/16 Lock
9	1347	2	Cotter
10	1344	2	Pin
11	1552	1	Spool (not sold separately)
12	1551	1	Casting (not sold separately)
13	1290	2	Washer, Lock 1/4" I.D.
14	1557	2	Bolt, Cap 1/4 - 20 x 2-3/4 GS
15	1774	2	Bolt, 1/4 - 20 x 2"
19	1768	1	Spacer Sleeve
20	1769	2	Stop Washer
21	1773	1	Spring
22	1771	1	Shoulder Bolt
23	1772	1	Cap, Spool
24	1513	2	Washer, 9/16 Alum.
25	1780	1	Switch
26	1770	1	Stop Sleeve
27	1606	3	O-Ring #2-010 Valve Seal
28	1561	2	O-Ring #2-012
29	1560	1	Housing
30	1624	1	Ball, 5/32
31	1625	1	Socket, 5/32 Ball
32	1343	1	Spring
33	1562	1	Screw, Adj. 5/16 - 24 x 3/4
34	1563	1	Cap
35	1575	1	Relief Cartridge Assm.

WILLIAMS MACHINE & TOOL CO.